## **User Manual**

Revision B

Product:Part number:Date:Brake Lining Kit9000692022-08-18

## Brake Lining replacement model EV-97

Your turntable is at delivery adjusted to work perfectly. But in time the Brake Pad is grinded down when used. When the Brake Pad is worn out, you need to replace the Brake Lining Kit.

To replace the Brake Lining Kit:


- 1. Make sure that the motor is inactivated.
- 2. With a screwdriver, turn the bolt counterclockwise to prevent the Brake Lining Kit to be pressed against the Bearing.
- 3. Untighten and remove the screw that mount the Brake Lining Kit to the Locking Arm.
- 4. Remove the Brake Lining Kit and replace it with a new one.
- 5. Tighten it with the included screw. Tighten it with torque 4 Nm.
- 6. With a screwdriver, turn the bolt clockwise until the Brake Lining is locking the Turntable. Then turn it counterclockwise just enough until you can rotate the seat without braking.
- 7. Tighten the nut against the lock arm again.

Turn page to see describing images for the steps above.

## **User Manual**

Revision B

Product:Part number:Date:Brake Lining Kit9000692022-08-18

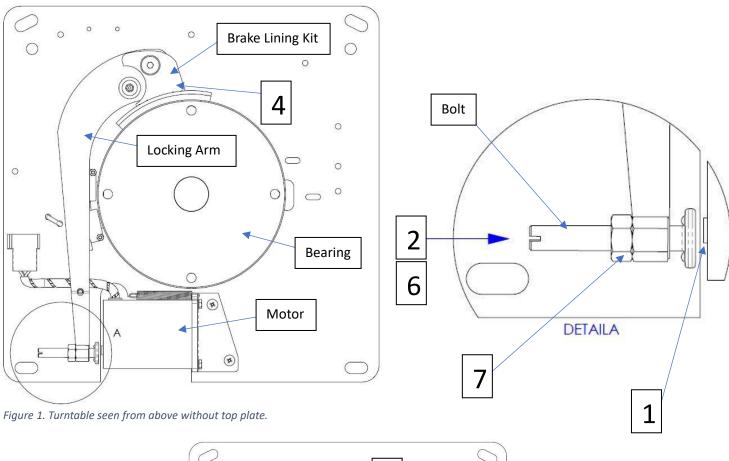

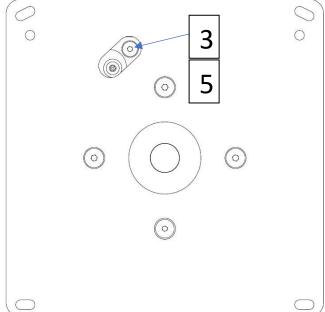


Figure 2. Turntable seen from above with top plate.